




# PRW-540-WN PRW-540-WN-OT OWNER'S MANUAL

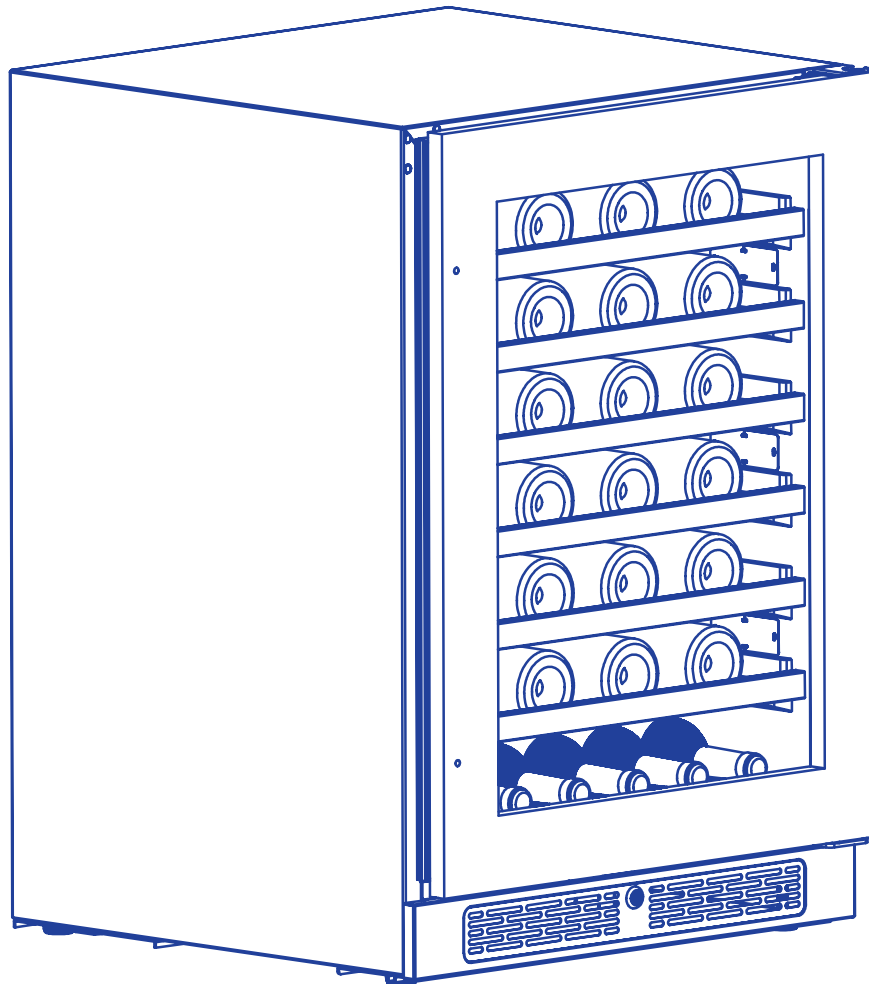

## Whynter 24" Panel Ready Wine Refrigerator

### 54 BOTTLES | VARIABLE INVERTER COMPRESSOR

**[ PROFESSIONAL ]**  
INSTALLATION REQUIRED

This unit demands precision alignment with custom cabinetry, specialized hinge adjustments, and intricate anchoring of heavy wood panels. Professional installation ensures proper leveling, safe ventilation, and the preservation of your warranty.

### **Congratulations on your new Whynter product!**

To ensure proper operation, please read this Instruction Manual carefully before using this product. Keep this manual in a safe place for future reference.

V092026

# Table of Contents

|                                 |    |
|---------------------------------|----|
| SAFETY PRECAUTIONS.....         | 2  |
| TECHNICAL DATA.....             | 3  |
| PRODUCT INTRODUCTION .....      | 3  |
| INSTALLATION INSTRUCTIONS ..... | 5  |
| OPERATION .....                 | 8  |
| CONTROL.....                    | 9  |
| STORAGE & MOVING .....          | 10 |
| MAINTENANCE .....               | 11 |
| TROUBLESHOOTING GUIDE .....     | 12 |
| WARRANTY.....                   | 14 |

## SAFETY PRECAUTIONS



**DANGER**

**The Safety Alert Symbol indicates potential hazards that could result in serious injury. All safety messages will follow the Safety Alert Symbol and either the word “DANGER” or “WARNING.”**

Your safety and the safety of others are very important to us. To reduce the risk of fire, electrical shock or injury when using the appliance, follow basic precautions, including the following:



**Danger** means that failure to heed this safety statement may result in severe injury or death.



**Warning** means that failure to heed this safety statement may result in extensive product damage, serious injury, or death.



**Caution** means that failure to heed this safety statement may result in minor or moderate injury, or property or equipment damage.

All safety messages will alert you to know what the potential hazard is, tell you how to reduce the chance of injury, and let you know what can happen if the instructions are not followed.

**SAVE THESE INSTRUCTIONS**  
For continued safe use of your appliance.

## SAFETY PRECAUTIONS

### IMPORTANT SAFETY GUIDELINES

Before the appliance is used, it must be properly positioned and installed as described in this manual. Please read the manual carefully. To reduce the risk of fire, electrical shock, or injury when using the appliance, follow basic precautions, including the following:

- Do not use the appliance if the power supply cord is damaged. If damaged, it must be replaced by a qualified electrician.
- It is recommended that a separate circuit, serving only your appliance, be provided. Use receptacles that cannot be turned off by a switch or pull chain.
- Never clean appliance parts with flammable fluids or harsh chemicals. These fumes can create a fire hazard or explosion.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of the appliance or any other appliance.
- Before proceeding with cleaning and maintenance operations, make sure to unplug the appliance.
- Do not connect or disconnect the electric plug with wet hands
- Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- This appliance is CFC- and HFC-free and contains small quantities of Isobutane (R600a), which is environmentally friendly but flammable. It does not damage the ozone layer, nor does it increase the greenhouse effect. Care must be taken during the transportation and setup of the appliance to ensure that no parts of the cooling system are damaged. Leaking coolant can ignite and may damage the eyes.

In the event of a coolant leakage:

- Avoid open flames and anything that creates a spark.
- Disconnect the appliance from the mains.
- Ventilate the room in which the appliance is located for several minutes, and contact the Service Department for advice.




**Follow the warning callout below only when applicable to your model**

- Do not plug into the power outlet before setup is completed.
- Use two or more people to move and install the appliance. Failure to do so can result in injury.
- To ensure proper ventilation for your appliance, the front of the appliance must be completely unobstructed. Choose a well-ventilated area with temperatures above 60°F (16°C) and below 90°F (32°C). This appliance must be installed in an area protected from the elements, such as wind, rain, water spray, or drips.
- The appliance should not be located next to ovens, grills, or other sources of high heat.
- The appliance must be installed with all electrical connections in accordance with state and local codes.
- The fuse (or circuit breaker) size should be 15 amperes.
- It is important for the appliance to be level in order to work properly. For a stable installation, make sure the appliance is placed on a flat, level, and solid surface.
- Ensure that the surface on which the appliance is placed is strong enough to hold the appliance and the items stored inside.
- This appliance is not intended for use by young children or physically challenged persons without supervision or assistance. Young children must be supervised to ensure safety around this or any appliance.
- Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- Keep fingers out of "pinch point" areas. Clearances between the doors and between the doors and the cabinet are necessarily small. Be careful when closing doors while children are in the area.
- This refrigerator is designed for storing beverage cans and wine bottles only. It is not intended for storing food or perishable items. The temperature range is optimized specifically for wine and beverage storage.
- Do not place hot beverages into the appliance.
- Close the refrigerator door immediately after placing any items inside to keep the internal temperature relatively constant.
- Avoid placing any objects on top of the appliance.
- This is an electrical appliance. To avoid injury from electrical shock, do not operate the unit with wet hands, while standing on a wet surface, or while standing in water. Do not use outdoors or in wet conditions.
- When positioning or moving the appliance, ensure that it is not turned upside down or tilted more than 45°.
- Never pull the power cord to disconnect it from the outlet. Grasp the plug and pull it straight out from the outlet. Never lift, carry, or drag the appliance by the power cord.
- This appliance is designed for household, non-commercial use only. Any Other use will void the warranty.
- Do not move this appliance without emptying it and securing the door in a closed position.

SPECIFICATIONS

|                      |                                |
|----------------------|--------------------------------|
| VOLTAGE:             | 115V/60HZ                      |
| RATED CURRENT:       | 1.2A                           |
| CAPACITY:            | 46 STANDARD 750ML WINE BOTTLES |
| TEMPERATURE RANGE:   | 41°F- 68°F (5°C- 20°C)         |
| NET WEIGHT:          | 102 LBS                        |
| GROSS WEIGHT:        | 116.5 LBS                      |
| UNIT DIMENSION:      | 23.7"W X 23.5"D X 33.9"H       |
| PACKAGING DIMENSION: | 27.4"W X 27.4"D X 38.8"H       |
| REFRIGERANT:         | R600A                          |

PRODUCT INTRODUCTION

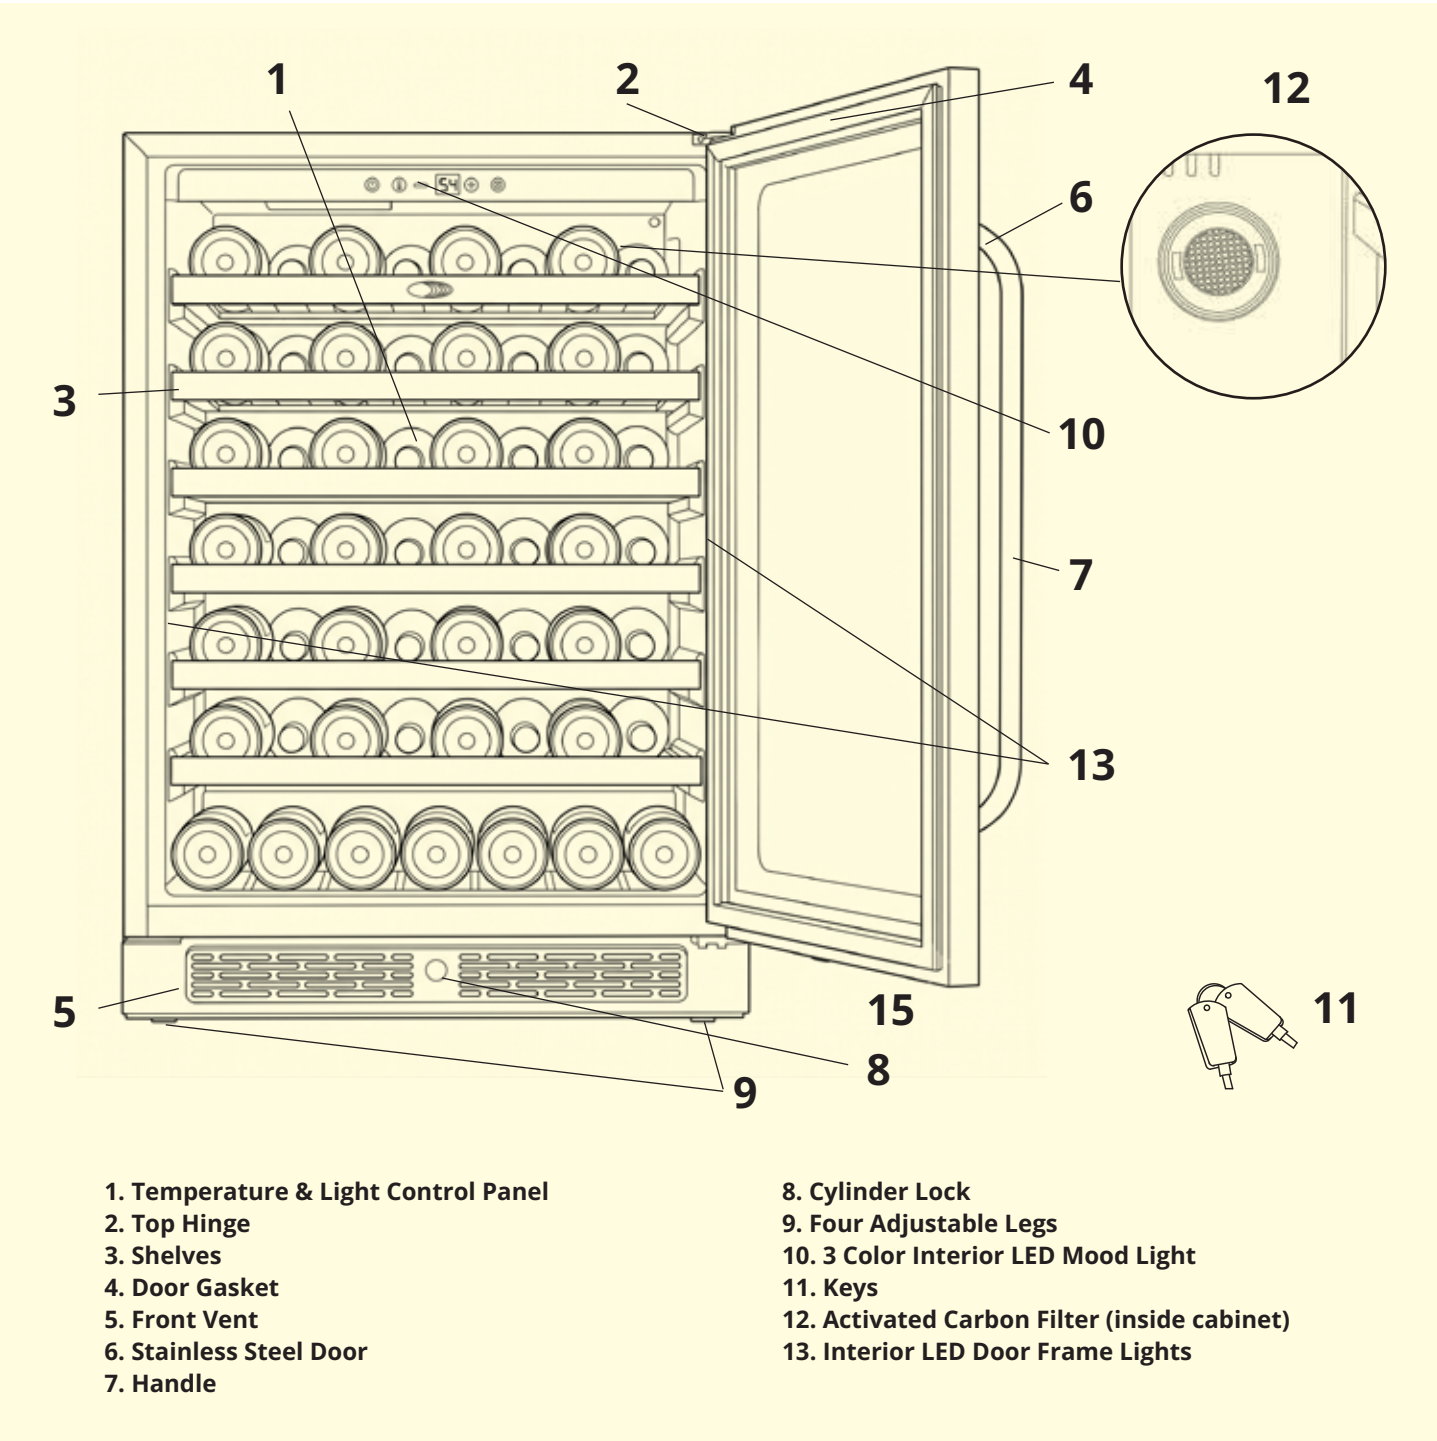

### [ PROFESSIONAL ] INSTALLATION REQUIRED


This unit demands precision alignment with custom cabinetry, specialized hinge adjustments, and intricate anchoring of heavy wood panels. Professional installation ensures proper leveling, safe ventilation, and the preservation of your warranty.

#### INSTALLATION OF THE WOOD PANEL ON THE DOOR

Your panel-ready appliance is designed to accept a customer-supplied custom wood panel. The easiest way to attach the panel is to remove the door, clamp the panel to the door, attach it with screws, and then reinstall the door onto the unit.


##### 1. Frame Preparation

- For a right-hinge opening appliance, cut the panel to the dimensions shown in the diagram. Reverse the dimensions for a left-hinge opening appliance.
- Recommended panel thickness is 3/4" (19 mm); the panel should not weigh more than 10 pounds.
- Panel dimensions shown in the diagram (in millimeters) represent the size needed to cover the appliance door. The panel can be made wider and/or taller to match surrounding cabinetry; modifications to these instructions will be required in that case.

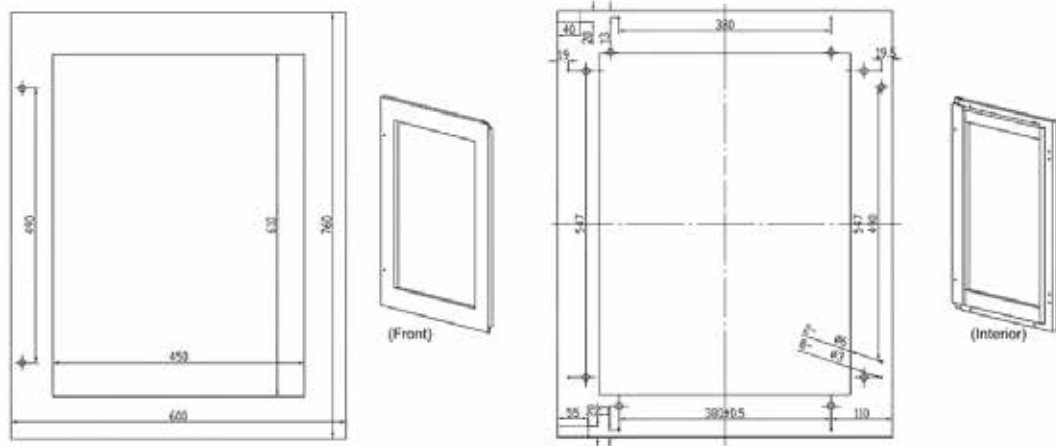

##### 2. Remove the Door from the Appliance.

- Open the door and loosen the screws from the support rod of the bottom hinge
- Remove the door from the upper hinge and take out the support rod. Pull off the rubber door seal to expose the screw holes.

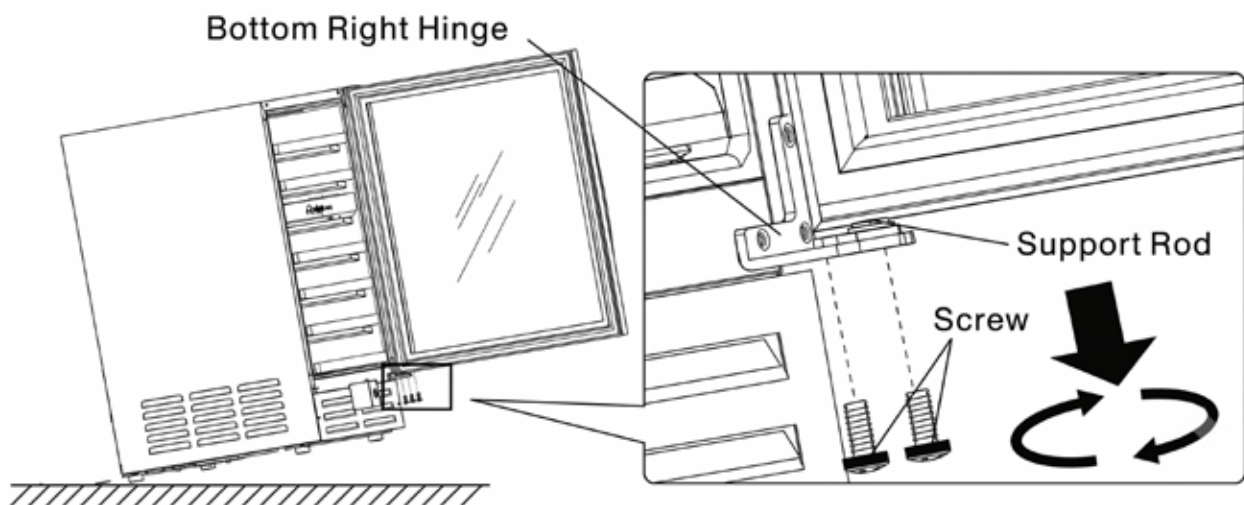

## INSTALLATION

### 3. Installing a Custom Handle


- If you are using your own custom handle (not the one supplied), attach the handle to the custom panel using countersunk screws.
- If you are using the handle provided, proceed to the next step.

### 4. Clamp the Custom Panel to the Door Frame

- Be sure to align the panel with the top of the door frame.
- Center the panel along the width (side to side).

### 5. Attaching the Panel and Handle

- It is best to drill 1/2" pilot holes before attaching the door panel. This will help prevent the wood from splitting.
- Fasten the wood panel (A) using the 6 washers and screws, driving them through the holes from the inside of the door through the gasket channel.
- Drill the handle holes ONLY through the wood.
- Attach the handle (B) using the long screws and washers provided.

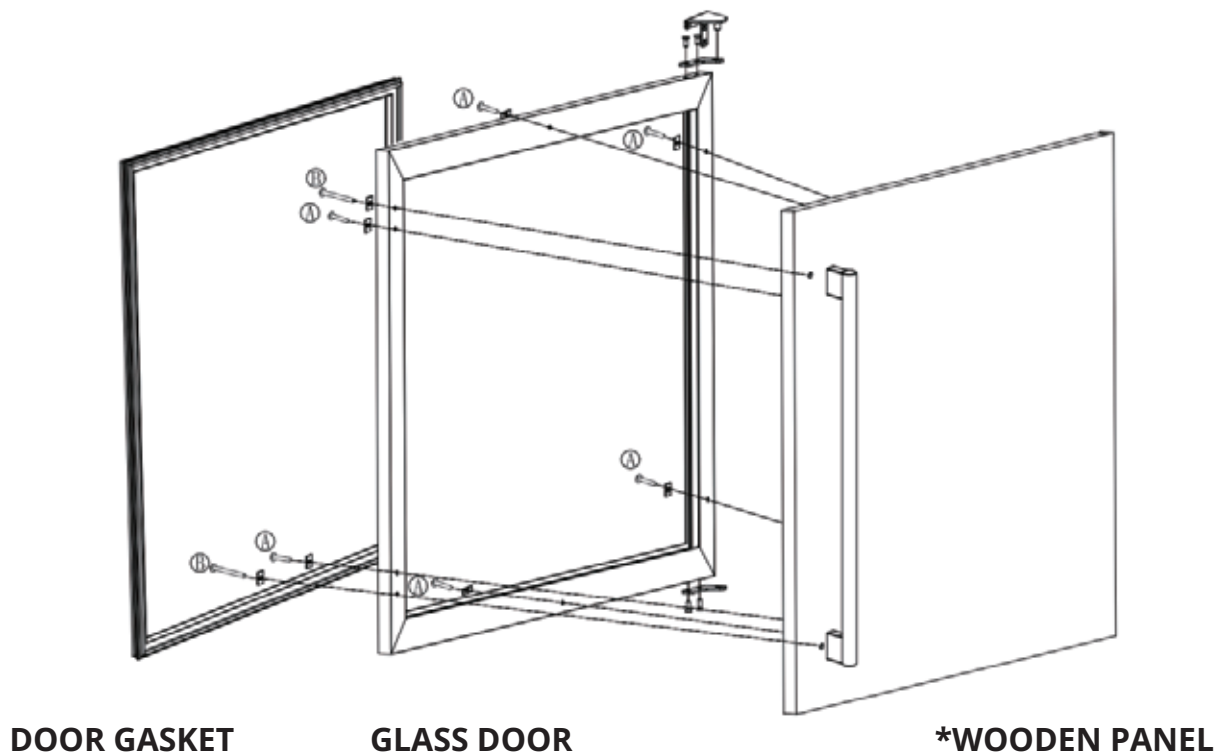

NOTE: Please be cautious not to drill through the front of the wood panel. Before drilling holes for the handle, double-check their location using the provided diagram. \*Wooden panel sold separately

### 6. Re-Install the Door

- Reinstall the door by reversing the door removal steps. Refer to Steps 1–2 in the “Reversing the Door” section on page 9.

## INSTALLATION

### Before Using the Appliance

- **Unpacking:** Remove all exterior and interior packing materials before starting the setup process.
- **Cooling System Stabilization:** Let the appliance stand completely upright for approximately 4 hours before connecting it to a power source. This reduces the risk of a cooling system malfunction caused by transportation handling.
- **Initial Cleaning:** Wipe down the interior surfaces with lukewarm water using a soft cloth.
- **Door Customization:** Complete the installation of your custom wood panel overlay and door handle.

### Placement & Clearance Requirements

- The appliance is designed for built-in, recessed, or freestanding setups.
- **Indoor Use Only.** Do not store or install this appliance outdoors.

**Avoid Moisture:** Avoid locating the unit in areas exposed to excessive moisture.

- **Floor Conditioning:** Place the unit on a hard, level floor strong enough to support its weight when fully loaded. Installation on carpet is not recommended.
- **Leveling the Appliance:** If the unit is uneven, adjust the four leveling legs located at the bottom of the chassis as needed.

### Ventilation Clearance Requirements


- **Freestanding Layouts:** Maintain a suggested 5" (127 mm) of space between the back and sides of the appliance for proper air circulation to cool the compressor and condenser.
- **Built-In Layouts:** A minimum clearance of 1/4" (6.35 mm) must be maintained on each side and at the top.
- **CRITICAL:** The front base vent grille must never be covered, blocked, or installed behind a cabinet door in any way.
- **Thermal Interference:** Do not install near ovens, direct sunlight, or other heat sources. These elements can damage the acrylic coating and increase electrical energy consumption.

### Electrical Requirements

- **Dedicated Power Source:** Plug the appliance directly into an exclusive, grounded 3-prong wall power outlet.
- **DANGER:** Do not under any circumstances cut or remove the third (ground) prong from the power cord.
- **Technical Support:** Any technical questions regarding power routing or grounding compliance should be immediately directed to a qualified electrician or an authorized service center.

### Built-In Cabinet Instructions

- This appliance is designed for both built-in and freestanding installation. For built-in installation, ensure proper service access and ventilation by allowing at least 1/4" (6.35 mm) of space on each side and at the top.
- Do not block the front vent.

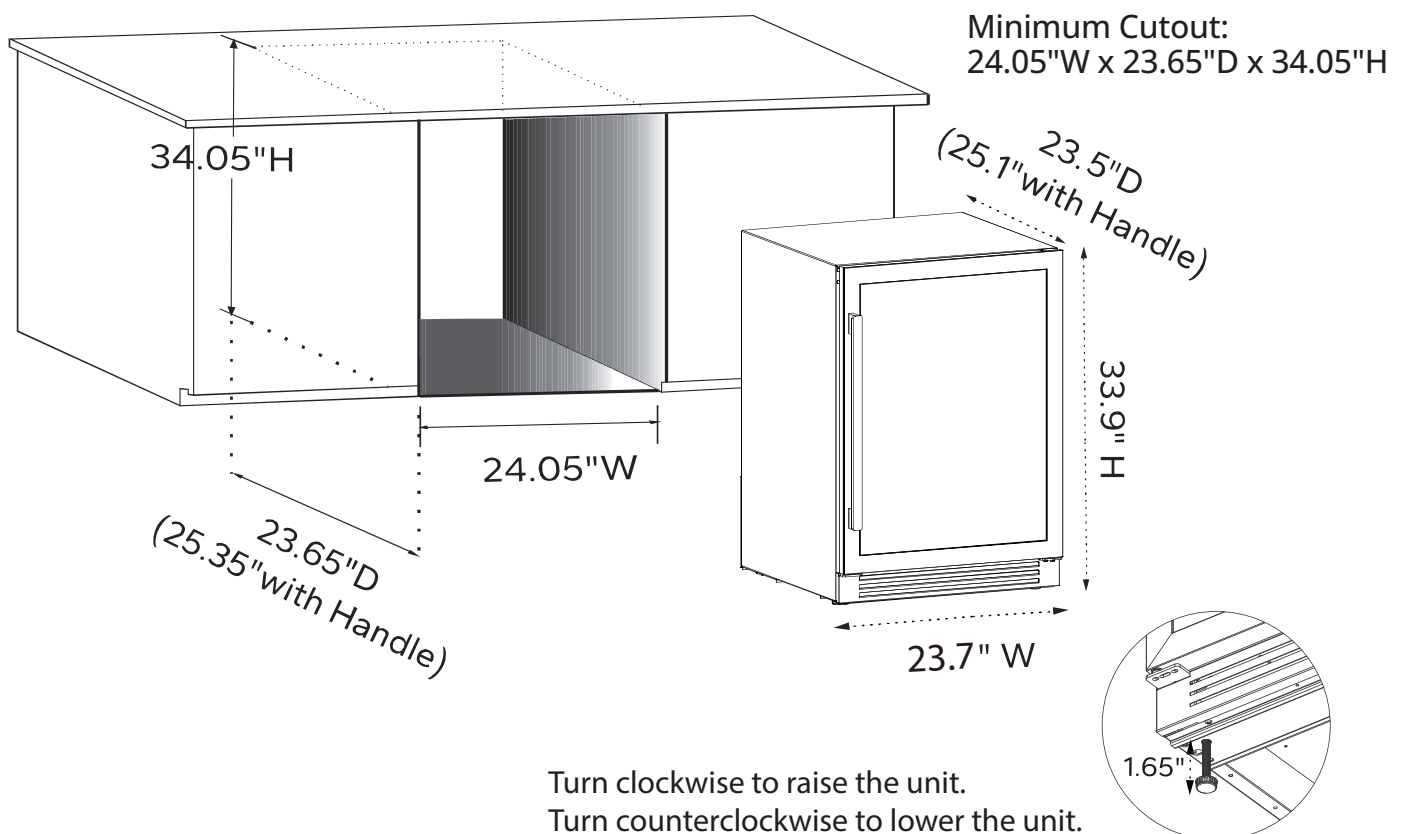



## INSTALLATION

### ELECTRICAL CONNECTION

**WARNING:** Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by a qualified electrician or contact the Whynter Service Department.

This appliance requires a standard 115/120-Volt AC ~ 60 Hz electrical ground outlet with a three-prong plug. Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded. The cord should be secured behind the appliance and not left exposed or dangling, to prevent accidental injury.

The appliance should always be plugged into its own individual electrical outlet with a voltage rating that matches the rating label on the appliance. This provides the best performance and also prevents overloading household wiring circuits, which could cause a fire hazard from overheating. Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull it straight out from the receptacle. Repair or replace immediately any power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. When moving the appliance, be careful not to damage the power cord.


### EXTENSION CORD

Because of potential safety hazards, it is strongly recommended that you do not use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL/CUL-listed, 3-wire grounding-type extension cord with a grounding-type plug and outlet, and that the electrical rating of the cord is 115 volts and at least 10 amperes.

### INSTALLING THE HANDLE

This stainless steel handle is not required for operation. To install the handle, please follow the instructions below:

1. Remove the door gasket. The gasket can be easily removed by hand; no tools are necessary.
2. Use a flat-head screwdriver to remove the two preinstalled decorative screw covers from the back of the door. (Some models have no decorative covers.)
3. Install the handle tightly using the two screws, lock washers, and flat washers provided. (DO NOT over-tighten, as this will cause damage to the handle and the stainless steel door frame.)
4. Replace the door gasket.

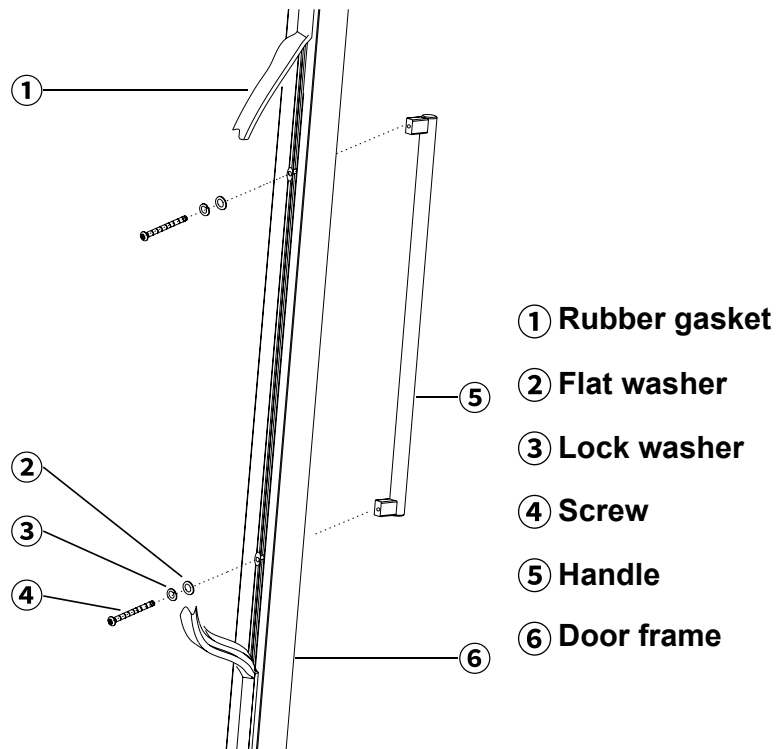




# INSTALLATION

## REVERSING THE DOOR

This appliance has the capability of the door opening from either the left or right side. The appliance is delivered with the door opening from the left side. Should you wish to reverse the opening direction, please follow the instructions below.

1. Remove the bottom hinge holder (2) by unscrewing the two lock screws. Be careful to hold the glass door firmly after removing the screws.
2. Gently pull down to remove the glass door from the right top hinge and place it on a padded surface to avoid the risk of damage.
3. Using a flat-head screwdriver, gently pry up the decorative hinge cover plate on the top left of the unit and the round black decorative cover caps on the upper left-side corner of the inside cabinet frame. Use them to cover the screw holes on the right-hand side.
4. Move the top hinge from the right-hand side and use the upper right hinge (included with the manual) to install on the left side of the cabinet by removing screws (7).
5. Relocate the door to the left-hand side of the cabinet by placing the door hinge holes onto the hinge, then screw the bottom hinge assembly with the lower hinge fixer (4) onto the left designated position and tighten after the door is leveled.

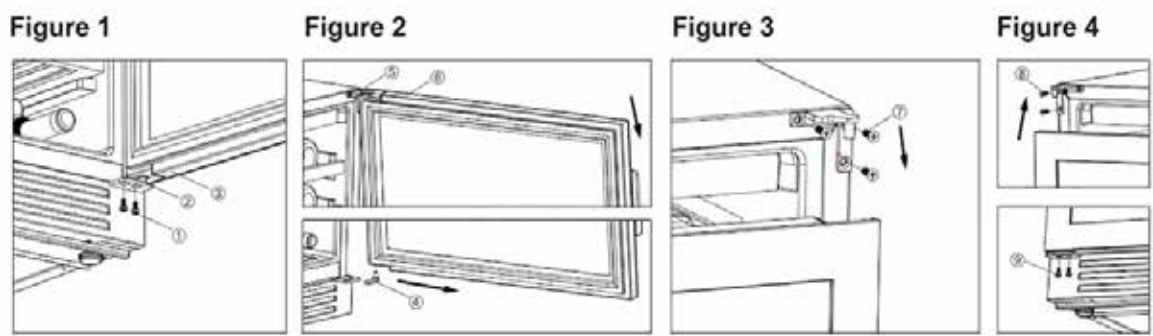


# CONTROL

## TEMPERATURE SETTING

It is recommended that you install the appliance in a location with an ambient temperature between 72°–78°F for optimal performance. (Acceptable operating range: 60°–90°F.). If the ambient temperature is above or below the recommended range, the performance of the refrigerator may be affected. For example, placing your appliance in extreme cold or hot conditions may cause interior temperatures to fluctuate.

### RECOMMENDED TEMPERATURE SETTING



|                 |           |
|-----------------|-----------|
| CONSERVATION    | 49 - 57°F |
| RED WINES       | 58 - 65°F |
| DRY/WHITE WINES | 48 - 57°F |
| ROSE WINES      | 49 - 51°F |
| SPARKLING WINES | 40 - 47°F |

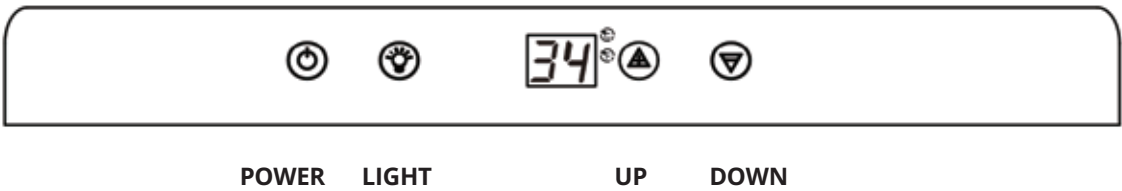

## CONTROL PANEL

- POWER** — To turn the appliance on or off, press and hold the power key for 5 seconds.
- UP** — To increase (warm) the set temperature by 1°C or 1°F.
- DOWN** — To decrease (cool) the set temperature by 1°C or 1°F.
- LIGHT** — Switch between 3 different colors and off. The available light color options are white, blue, and amber.

Note: When using the beverage refrigerator for the first time, or when restarting after it has been shut off for a long period of time, there may be a few degrees of variance between the set temperature and the LED readout. This is normal due to the length of activation time. The unit should return to normal after running for a few hours.

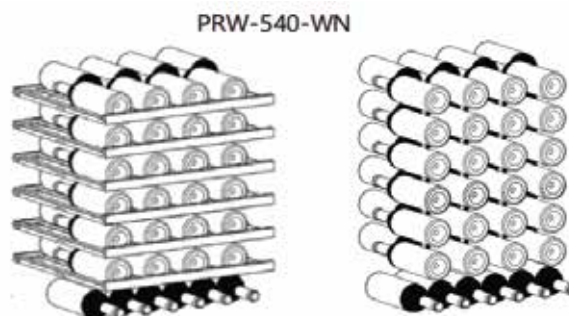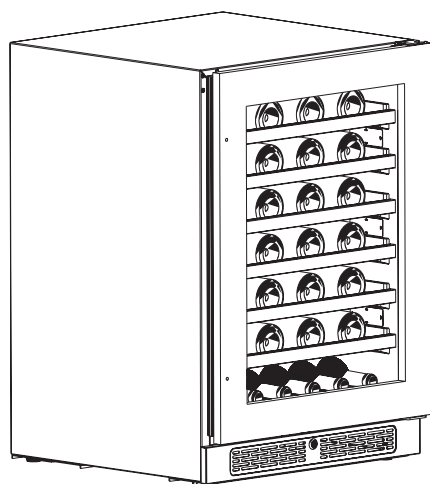

**WARNING:** THIS PRODUCT IS DESIGNED FOR STORING AND COOLING BEVERAGES. IT IS NOT INTENDED FOR THE STORAGE OF PERISHABLE FOODS.

### Large Storage Capacity

Large Storage Capacity: While bottles may vary in size and dimension, approximately 54 standard 750ml bottles can be stored in the wine cooler. You can place 8 bottles on each shelf and 6 bottles in the bottom of the cabinet.

- Do not overload your refrigerator.
- Avoid obstructing the internal fans (located inside on the back panel of the refrigerator).
- Do not try to slide the shelves outward beyond their fixed position, to prevent bottles from falling.
- Do not pull out more than one loaded shelf at a time, as this may cause the beverage refrigerator to tilt forward if not properly installed.

### CAPACITY DISCLAIMER:

- Estimates only: Maximum storage totals are subject to user loading style and container dimensions.
- Not guaranteed: Layout configuration is at the user's discretion, and specific capacities are not guaranteed for all setups.

### MOVING THE REFRIGERATOR

- Remove all items.
- Securely tape down (painter's tape is recommended) all loose items (such as shelves) inside the appliance.
- Turn the adjustable legs up to the base to avoid damage.
- Tape the door shut (painter's tape is recommended).
- Ensure the appliance remains in the upright position during transportation, and protect the exterior with a blanket or similar item.

### CLEANING YOUR APPLIANCE

- Turn off the power, unplug the appliance, and remove all items including shelves.
- Wipe the interior with a warm water and baking soda solution. Use approximately 2 tablespoons of baking soda per one quart of water.
- Wipe the shelves with a mild detergent solution.
- Wipe the outside cabinet with warm water and mild liquid detergent.
- Do not use steel wool or a steel brush on the stainless steel. These will erode the stainless steel and rusting may occur.

**WARNING:** Failure to unplug the appliance before cleaning could result in electric shock or personal injury.

### VACATION TIME

- Short vacations: Leave the appliance operating during vacations of less than two days.
- Long vacations: If the appliance will not be used for an extended period, remove all items and turn off the appliance. Clean and dry the interior thoroughly.

### POWER FAILURE

- In the event of a power interruption, all previous temperature settings are automatically memorized. If power is interrupted (power surge, tripped breaker, etc.) and then restored, the unit will resume operating at the last set temperature.
- Most power failures are corrected within a few hours and should not significantly affect the temperature of your appliance if you minimize the number of times the door is opened. If the power will be off for a longer period of time, follow the Troubleshooting Guide to protect your contents.

### ACTIVATED CARBON FILTER SYSTEM

This product is equipped with one activated carbon filter, which ensures optimum air quality within the refrigerator. This filter prevents contaminants and odors from the ambient air from affecting the taste of the stored beverages. Replace the activated carbon filter once a year. To purchase a replacement charcoal filter, please contact: [support@whynter.com](mailto:support@whynter.com) for retail sales information.

To change the filter:

1. Turn the filter cover 90° clockwise or counterclockwise and remove the filter.
2. Insert the new filter in the vertical position.
3. Turn the filter cover 90° clockwise or counterclockwise until it clicks into position.



### ENERGY SAVING TIPS

- Locate the appliance in the coolest area of the room, away from heat-producing appliances and out of direct sunlight.
- Ensure that the appliance is adequately ventilated. Never obstruct the air vents.
- Close the door tightly and do not open the appliance too frequently or for long periods of time.
- Store contents in an organized manner.
- Do not overfill the appliance — leave room for air to circulate.



## Troubleshooting

Many problems are easily resolved.

Try the troubleshooting suggestions below

| PROBLEM                                  | POSSIBLE CAUSE                                                                                                                                                                                                                                                                                                            | SOLUTION                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Product does not operate.                | <ul style="list-style-type: none"> <li>Unit is not plugged in.</li> <li>Unit is turned off.</li> <li>Circuit breaker has tripped or fuse has blown.</li> </ul>                                                                                                                                                            | <ul style="list-style-type: none"> <li>Ensure the unit is plugged in.</li> <li>Turn the unit on.</li> <li>Check the circuit breaker or replace the fuse if necessary.</li> <li>Verify the outlet and circuit can support the unit's maximum power requirements.</li> </ul>                                                                                        |
| Product is not cold enough.              | <ul style="list-style-type: none"> <li>Temperature setting is too high.</li> <li>Door is opened too frequently.</li> <li>Door is not fully closed.</li> <li>Door gasket is not sealing properly.</li> <li>Room temperature is unusually high.</li> <li>A large amount of food or beverages was recently added.</li> </ul> | <ul style="list-style-type: none"> <li>Lower the temperature setting.</li> <li>Ensure the door is completely closed.</li> <li>Inspect the door gasket for proper sealing.</li> <li>Allow sufficient time for the unit to stabilize after adding a large amount of contents.</li> </ul>                                                                            |
| Compressor cycles on and off frequently. | <ul style="list-style-type: none"> <li>Room temperature is higher than normal.</li> <li>A large amount of contents was recently added.</li> <li>Door is opened too frequently.</li> <li>Door is not fully closed.</li> <li>Temperature setting is incorrect.</li> <li>Door gasket is not sealing properly.</li> </ul>     | <ul style="list-style-type: none"> <li>Close the door completely.</li> <li>Inspect the door gasket.</li> <li>Lower the temperature setting if the room is warmer than normal.</li> <li>Allow time for the unit to stabilize after adding contents.</li> <li>Verify the temperature is set correctly.</li> </ul>                                                   |
| Fan is always running.                   | <ul style="list-style-type: none"> <li>Ambient temperature is too high or too low.</li> <li>A large amount of contents was recently added.</li> <li>Door is opened too frequently.</li> <li>Door is not fully closed.</li> <li>Door gasket is not sealing properly.</li> </ul>                                            | <ul style="list-style-type: none"> <li>Operate the unit within the recommended ambient temperature range.</li> <li>Avoid adding large amounts of contents at one time.</li> <li>Minimize door openings and close the door securely.</li> <li>Inspect the door gasket for proper sealing.</li> </ul>                                                               |
| Fan runs continuously.                   | <ul style="list-style-type: none"> <li>Continuous fan operation is normal during cooling.</li> <li>Lower temperature settings require longer fan operation.</li> <li>High ambient temperatures increase run time.</li> </ul>                                                                                              | <p>If the fan continues running at a relatively warm temperature setting:</p> <ol style="list-style-type: none"> <li>1. Verify the unit is cooling properly.</li> <li>2. Wait approximately 15 minutes to see if the fan stops.</li> <li>3. If the fan continues running and the unit is not cooling, contact Whynter Customer Support for assistance.</li> </ol> |



### Live Support

Still having issues? Get real-time help through our live chat.





## Troubleshooting

Many problems are easily resolved.

Try the troubleshooting suggestions below

| PROBLEM                            | POSSIBLE CAUSE                                                                                                                                                         | SOLUTION                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interior light does not work.      | <ul style="list-style-type: none"> <li>Unit is not plugged in.</li> <li>Circuit breaker has tripped or fuse has blown.</li> <li>Light switch is turned off.</li> </ul> | <ul style="list-style-type: none"> <li>Ensure the unit is plugged in.</li> <li>Check the circuit breaker or replace the fuse if necessary.</li> <li>Turn the light switch on.</li> </ul>                                                                                                                                                                                                                                                                                                                                                  |
| E1, E2, E5, E6, E7, E8, E9, EA, EU | Temperature sensor failure                                                                                                                                             | Contact Whynter Customer Support for assistance.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| LO                                 | Low temperature alarm                                                                                                                                                  | Contact Whynter Customer Support for assistance.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| HI                                 | High temperature alarm                                                                                                                                                 | Ensure the ambient temperature is within the recommended operating range and verify the door is fully closed. Allow the unit time to recover if warm contents were recently added or the door was opened frequently. Confirm that the compressor and both the internal and external fans are operating. If both of the above are operating normally, the temperature sensing probe may be faulty. If the internal fan does not spin, it indicates a fan malfunction. For any of these issues, please contact the customer service center. |
| Et                                 | Temperature difference alarm                                                                                                                                           | Turn the unit off and unplug it. Leave the door open for 24 to 36 hours to allow any ice buildup to melt. After the ice melts, restart the appliance and set the desired temperature. If the error remains, remove the interior fan cover and inspect for ice accumulation. If the issue persists after defrosting, contact Whynter Customer Support. Avoid setting the unit to the coldest temperature immediately after restarting.                                                                                                     |
| E0                                 | Door open alarm                                                                                                                                                        | Verify the door is completely closed and latched. If the error remains after closing the door, contact Whynter Customer Support.                                                                                                                                                                                                                                                                                                                                                                                                          |



## Live Support

Still having issues? Get real-time help through our live chat.





**1 YEAR LIMITED WARRANTY &  
3 YEARS WARRANTY ON COMPRESSOR**  
Warranty begins from the original date of purchase

This WHYNTER product is warranted to the original owner, purchased from an authorized Whynter dealer within the 48 U.S. continental states, for one year from the original purchase date against defects in material and workmanship under normal residential usage. Should your WHYNTER product prove defective within one year from the date of purchase, contact Whynter's Customer Support team with the serial number and proof of purchase to make a warranty claim. A Return Authorization number must be issued before returning any parts or products. Parts or products received without a Whynter-issued Return Authorization number will be refused. Under this warranty, Whynter will repair or replace any parts found defective with new or re-manufactured parts or exchange the defective product with a new, refurbished, or re-manufactured product at Whynter's discretion. All defective products and parts covered by this warranty will be repaired or replaced on a mail-in basis to Whynter's Service Center. This warranty is not transferable. After the expiration of the warranty, the cost of labor and parts will be the responsibility of the original owner.

The compressor is warranted for an additional two years after the one-year limited warranty expires from the date of purchase.

After two months to one year, the customer will be responsible for the return freight cost to Whynter's Service Center. Please package the product carefully in its original packaging to avoid damage during transit. Whynter is not responsible for damage resulting from shipper mishandling or improper packaging. Please retain the original box and packaging materials.

**THIS WARRANTY DOES NOT COVER:**

- Acts of God, such as fire, flood, hurricanes, earthquakes and tornadoes.
- Improper power supply such as power surge, low voltage, defective household wiring or inadequate fuses.
- Use in commercial or industrial applications.
- Damage, accidental or otherwise, to the product while in the possession of a consumer not caused by a defect in material or workmanship.
- Damage caused by consumer misuse, tampering, lack of maintenance or failure to follow the care and special handling provisions in the instructions.
- Damage to the finish of the case, or other appearance parts caused by wear.
- Damage caused by repairs or alterations to the product by anyone other than authorized by the manufacturer.
- Removal, Replacement Packaging, Freight and Insurance cost for the warranty service.
- Products sold AS IS or from an unauthorized reseller.
- Products that have had their serial numbers removed or defaced.

**DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES**

*CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. THE COMPRESSOR WARRANTY PROVIDES A TOTAL OF THREE (3) YEARS OF COVERAGE FROM THE ORIGINAL DATE OF PURCHASE, CONSISTING OF THE ONE-YEAR LIMITED WARRANTY PLUS AN ADDITIONAL TWO YEARS. WHYNTER SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. UNAUTHORIZED MODIFICATIONS OR ALTERATIONS TO THIS UNIT WILL VOID THE MANUFACTURER'S WARRANTY. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. PRODUCT CONTENTS AND SPECIFICATIONS MAY CHANGE WITHOUT NOTICE.*







**Need Help Fast?**  
**Chat with Us!**  
Get instant answers 24/7



**JOIN THE  
CONVERSATION**



**E: [support@whynter.com](mailto:support@whynter.com) | T: 866-WHYNTER | [www.whynter.com](http://www.whynter.com) | ©2026 Whynter LLC**

Disclaimer: All information and technical data provided in this manual are approximate values and estimations. Whynter reserves the right to modify product specifications or documentation without prior notice to improve performance and safety.