



CDF-177SB OWNER'S MANUAL



Whynter Countertop Reach-In 1.8 cu ft Display Glass Door Freezer

Congratulations on your new Whynter product!

To ensure proper operation, please read this Instruction Manual carefully before using this product. Keep this manual in a safe place for future reference.

Table of Contents

Table of Contents	2
Safety Precautions	2-3
Parts and Accessories	4
Technical Data	5
Installation	5-7
Operation and Controls	7-8
Cleaning and Maintenance	9
Troubleshooting	10
Warranty	11

SAFETY PRECAUTIONS



To Reduce The Risk Of Fire, Electrical Shock, Or Injury When Using Your Glass Door Freezer, Follow These Basic Precautions.

- This appliance is not intended for use by persons (including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Read all instructions before using the appliance.
- Never clean appliance parts with flammable fluids. The fumes can create a fire hazard. Do not use an excessively wet cloth, industrial solvents, and oil-based products to clean this appliance.
- To clean the Glass Door Freezer, use only mild detergents. Never use harsh chemicals or solvents.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard.
- Do not abuse, sit on, or stand on the appliance.
- Ensure the Glass Door Freezer is unplugged before cleaning or if not in use.
- Use the Glass Door Freezer only for its intended function. This appliance is designed for household, non-commercial use only. Any other use will void the warranty.
- Do not plug this Glass Door Freezer into the power source before setup is completed.
- An empty Glass Door Freezer can be dangerous for children and small animals. If disposing of the Glass Door Freezer, remove gaskets, latches, and the entire freezer door from your unused appliance so that children or small animals cannot be trapped inside.
- The Glass Door Freezer is an electrical appliance. To avoid serious injury from electrical shock, do not operate the Glass Door Freezer with wet hands, while standing on a wet surface, or while standing in water.
- To avoid the risk of shock, the product should never be used in bathrooms, shower rooms, or in any other steamy or wet areas.
- During installation, the power supply must not be excessively or dangerously bent or flattened.
- Do not tamper with controls.
- Make sure the power cord is placed fully and firmly into the power source. If the wall receptacle you intend to use is not adequately grounded or protected by a time delay fuse or circuit breaker, have a qualified electrician install an outlet that is appropriate to local electrical codes and requirements.
- Do not use multiple outlets or an extension cord as it may overheat and become a risk of fire. Please ensure that the Glass Door Freezer is plugged directly into the electrical outlet.
- The cord should be secured behind the unit and should not be left exposed or dangling.
- Make sure the power cord is clean before use.
- Make sure hands are dry when connecting the power cord. The appliance is equipped with a three-prong grounded plug on the power cord for your protection. Never modify, remove or attempt to repair the power cord yourself.
- Never pull the power cord to disconnect the unit from an outlet. Grasp the plug directly and pull it from the outlet.
- Never lift or carry the Glass Door Freezer by the power cord.
- Keep the power cord away from heated surfaces.
- Do not repair, disassemble or modify the appliance by yourself.
- Always turn off the appliance when cleaning or transporting.

SAFETY PRECAUTIONS

WARNING:

- Transport the appliance in an upright position only.
- Place the appliance on a hard, even, and level surface that is strong enough to support it when it is fully loaded
- Close the Glass Door Freezer door immediately after putting in any items to maintain the internal temperature of the unit.
- Avoid placing the Glass Door Freezer near external heat sources or direct sunlight.
- Place your appliance on a hard and level floor that is strong enough to support it when it is fully loaded.
- Do not turn the Glass Door Freezer upside down, on its side, or 45° or more off level.
- Keep fingers out of the “pinch point” areas; clearances between the door and compartment are necessarily small. Be careful closing drawers and door when children are in the area.
- Do not touch the cold surfaces in the Glass Door Freezer compartment when hands are damp or wet, skin may stick to these extremely cold surfaces.
- Do not move this Glass Door Freezer without securing the door in a closed and latched position.
- Do not drill holes or install other objects on the casing.
- This Glass Door Freezer is not suitable for storage of pharmaceutical products.
- Performance may vary based on operational and ambient conditions.

DANGER:

- Risk Of Fire or Explosion. Flammable Refrigerant Used. Do Not Use Mechanical Devices To Defrost freezer. Do Not Puncture Refrigerant Tubing.
- Risk Of Fire Or Explosion. Flammable Refrigerant Used. Consult Repair Manual/Owner's Guide Before Attempting To Install or Service This Product. All Safety Precautions Must be Followed.
- Risk Of Fire Or Explosion. Dispose Of Properly In Accordance With Federal Or Local Regulations. Flammable Refrigerant

ELECTRICAL CONNECTION

The power cord of this appliance is equipped with a 3-prong (grounding) plug which mates with a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock hazard from this appliance. Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded. Where a standard 2-prong wall outlet is encountered, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet. Do not use an adapter. The freezer should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate. A 115 Volt AC, 60 Hz, 15- or 20-amp fused, grounded electrical supply is required. This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires. Never unplug your freezer by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet. Repair or replace immediately all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. When moving the freezer away from the wall, be careful not to roll over or damage the power cord. Avoid using extension cords to prevent compressor failure.




Caution: Risk of fire / Flammable materials

- The main plug of the unit must feature an earthing contact. Do not introduce plug into a socket without effective earthing (if in doubt, please consult a certified technician).
- Do not remove any protective features.
- Never work on the freezer with a hose or high pressure cleaner. All maintenance work must be carried out by a certified technician.
- Disassembly must be carried out by a certified technician. Keep the ventilation holes in the cabinet free from obstructions.
- Do not use any mechanical or other tool different from the ones recommended by the manufacturer, in order to speed up the defrosting.
- WARNING: Keep all ventilation openings clear of obstructions.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING: Do not damage the circuit of the refrigerant circuit.
- WARNING: Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Do not use any electrical appliance, apart from the ones recommended by the manufacturer, inside the freezing compartment.
- Keep enough space in order to easily reach the main plug. If the power cable is damaged, it must be replaced by the manufacturer or by its after sales service, or in any case by a person with similar title, to prevent any possible risk.
- Do not damage the refrigerant circuit.
- Do not puncture refrigerant tubing.


SAVE THESE INSTRUCTIONS

For continued safe use of your appliance.

Front View

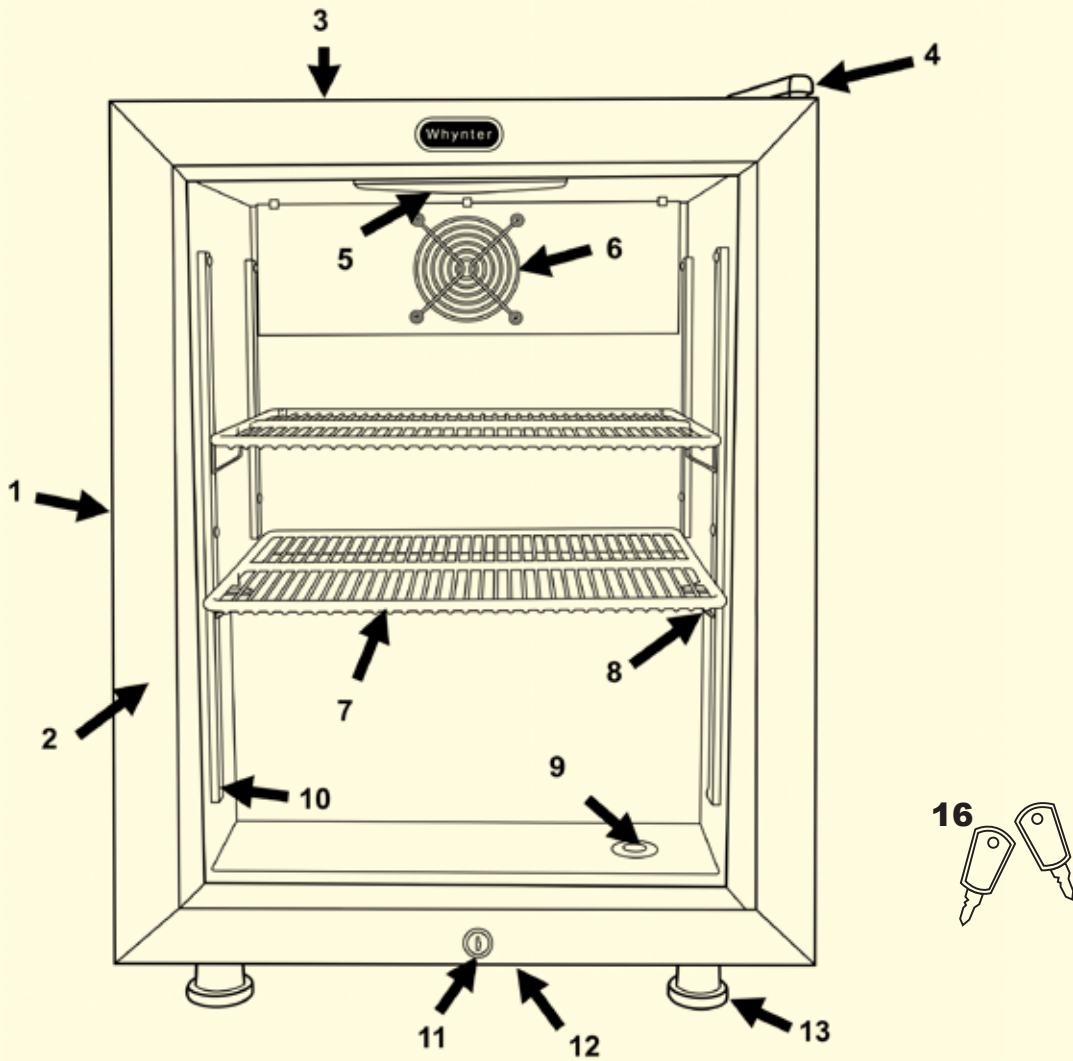

Lower Back View

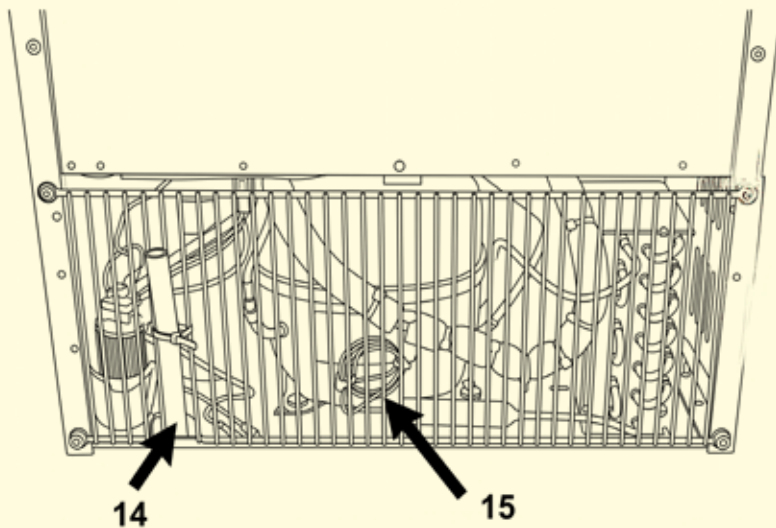

- 1. Recessed Door Handle
- 2. Door Frame
- 3. Temperature Control Knob / Light Switch (Rear)
- 4. Door Hinge Cover
- 5. Light
- 6. Internal Fan
- 7. Slide-Out Freezer Wire Shelves (2)
- 8. Shelf Clips (8)
- 9. Drain Cover / Drain
- 10. Pilaster (4)
- 11. Door Lock
- 12. Lock Latch
- 13. Leveling Leg (4)
- 14. Drain Tube
- 15. Compressor
- 16. Door Keys

TECHNICAL DATA

Ideal for any small space where cold storage is needed, the Whynter Countertop Reach-In 1.8 cu ft Display Glass Door Freezer can be used in kitchens, offices, garages, or basements. This space-saving glass door freezer features a stainless steel trimmed glass door, adjustable temperature control, and a lock for securing contents.

Features:

- Stainless steel trimmed glass door with sleek white cabinet
- Powerful compressor cooling
- Internal fan-forced circulation for even temperature distribution throughout the cabinet
- Equipped with 2 slide-out wire shelves
- Includes 8 shelf clips to safely set up shelves inside the cabinet
- Mechanical temperature control
- 3 color interior lighting (White, Blue, and Soft White and Blue Combo)
- Recessed handle provides a flush finish with the door
- Inside cabinet drain
- Temperature Range: -13°F ~ 3°F (-25°C ~ -16°C)
- Door lock and two keys
- Freestanding setup (clearance around the unit is needed)
- Manual Defrost

MODEL:	CDF-177SB
STORAGE VOLUME:	1.8 CU. FT.
TEMPERATURE CONTROL RANGE:	-13°F ~ 3°F
NET WEIGHT:	88.2 LBS
GROSS WEIGHT:	97 LBS
UNIT DIMENSIONS:	18.8"W X 25.4"H X 19.3"D
PACKAGING DIMENSIONS:	21.85"W X 28.94"H X 23.23"D
REFRIGERANT:	R290A
ESTIMATED YEARLY ELECTRICITY USE:	1,113 KWH
NOISE LEVEL:	43 DB
UPC:	852749006320

*PLEASE NOTE THAT ALL TECHNICAL DATA PROVIDED ARE APPROXIMATE VALUES AND ESTIMATIONS. ACTUAL PERFORMANCE MAY VARY BASED ON ENVIRONMENTAL FACTORS AND SPECIFIC INSTALLATION CONDITIONS.

INSTALLATION



WARNING: Excessive Weight Hazard

Two or more people should move and install Glass Door Freezer. Failure to do so can result in back or other injury.

FREESTANDING INSTALLATION

A freestanding installation will allow you to install the glass door freezer in any place you desire, provided that the required clearance space around the appliance is respected. In every setting, there must be adequate ventilation and access for service. Never install or operate the unit in an enclosed area, such as a closed cabinet. We recommend a minimum of 4-6" of clearance around the back and sides.

- Before connecting the glass door freezer to the power source, let it stand upright for approximately 4 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- The normal operation of the glass door freezer depends on heat radiation from the condenser. Allow at least 4-6" of space between the back and sides of the appliance, which allows proper air circulation to cool the compressor and condenser. The installation should allow the glass door freezer to be pulled forward for servicing if necessary.
- This unit **MUST** be installed in an area protected from the elements, e.g., wind, rain, water spray, or drips. Do **NOT** use the glass door freezer in an outdoor setting.
- The glass door freezer should not be located next to ovens, grills, or other high heat sources.
- Too much humidity in the air will cause frost to form quickly on the evaporator, requiring more frequent defrosting of the glass door freezer.
- Avoid locating the appliance in an area that may be exposed to excessive moisture.
- The glass door freezer must be installed with all electrical requirements followed.
- The unit should be located on a hard and level surface that can support the unit when it is full. It is important for the glass door freezer to be level in order to work properly. If needed, you can adjust the height of the glass door freezer by turning the leveling legs. See the "Leveling the Glass Door Freezer" section
- A standard electrical supply (115 VAC only, 60 Hz, 10A), properly grounded in accordance with National Electrical Code and local codes and ordinances, is required.
- **IMPORTANT:** Do not kink or pinch the power supply cord between the glass door freezer and wall or cabinet.

INSTALLATION

INSTALLATION AND SETUP

- Position the glass door freezer in a dry and well-ventilated place. Keep the glass door freezer away from direct sunlight, heaters, and corrosive gases or chemicals.
- Clean the interior surface with lukewarm water using a soft cloth.
- Place your appliance on a hard and level floor that is strong enough to support it when it is fully loaded.
- If the appliance needs to be lifted, two or more people should move the glass door freezer. Failure to do so can result in back or other injury.
- We do not recommend installing the appliance on carpet.


LEVELING THE GLASS DOOR FREEZER

It is important for the glass door freezer to be leveled in order to work properly. It can be raised or lowered by turning the four leveling legs on the bottom of the appliance. If the glass door freezer is not leveled during installation, the door may not close or seal properly, causing cooling, frost, or moisture problems.


NOTE: This glass door freezer comes with 4 leveling legs.

We recommend using a carpenter's level to check the machine.


1. Place a carpenter's level on top of the product to see if the glass door freezer is level from front to back and side to side.
2. Adjust the height of the legs as follows:
 - Turn the leveling leg to the right to lower that side of the glass door freezer.
 - Turn the leveling leg to the left to raise that side of the glass door freezer.

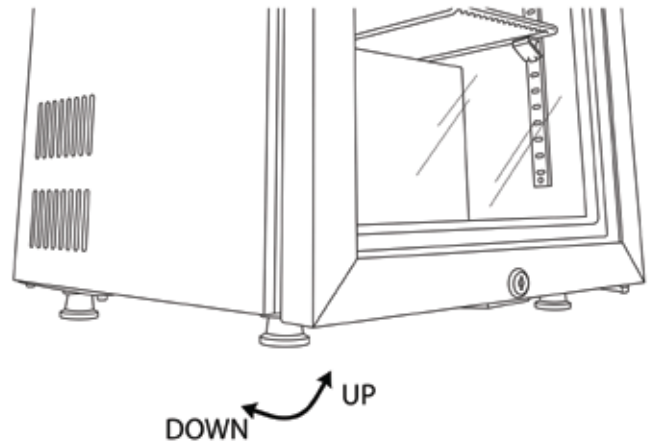

SHELF CLIP INSTALLATION

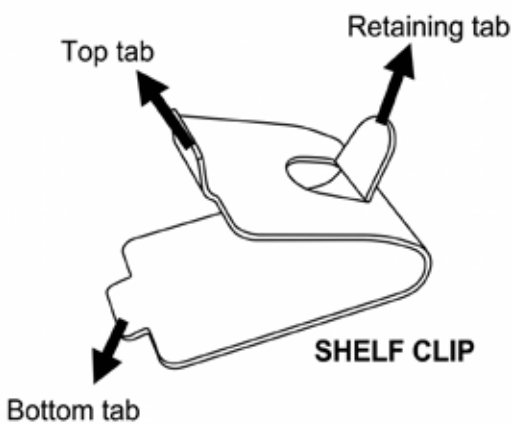


Properly Installed Clip

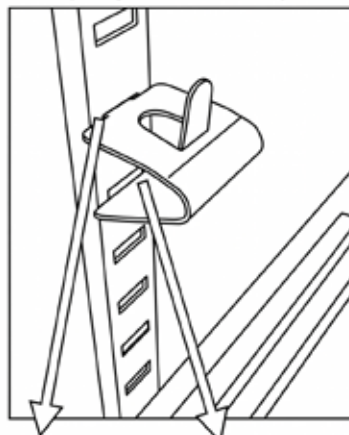

Top tab fully inserted into slot

Bottom tab fully seated

Improperly Installed Clip

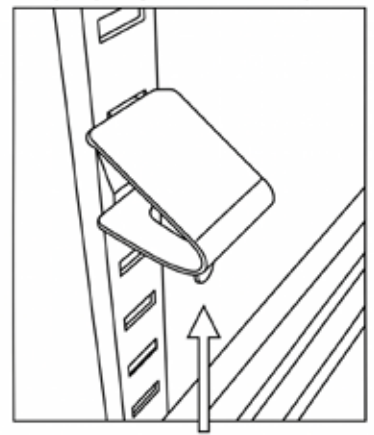


Shelf clip should not be installed upside down


INSTALLATION

SHELF INSTALLATION

1. Determine the proper location for the shelf clips. The reference slots on the pilaster can serve as a guide to ensure all clips are properly located.
2. Insert the top tab of the shelf into the desired slot of the pilaster. The retaining tab should be facing upwards as shown.
3. Insert the bottom tab into the appropriate slot on the pilaster. The shelf clip may need to be squeezed slightly during installation.
4. Install all remaining shelf clips as described above.
5. Install the wire shelves onto the clips. Be careful not to dislodge the shelf clips during shelf installation.
6. Shelves must be placed such that the shelf clip captures the wire shelf as shown.
7. Prior to loading the wire shelf, ensure that the wire shelf is resting on each of the 4 clips and the clips are installed as shown.

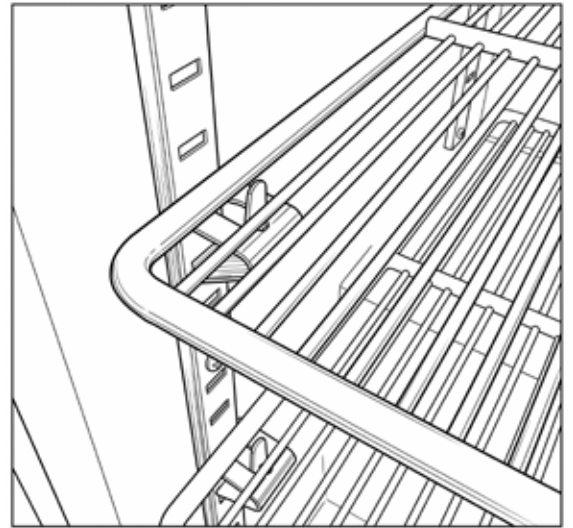

OPERATION AND CONTROLS

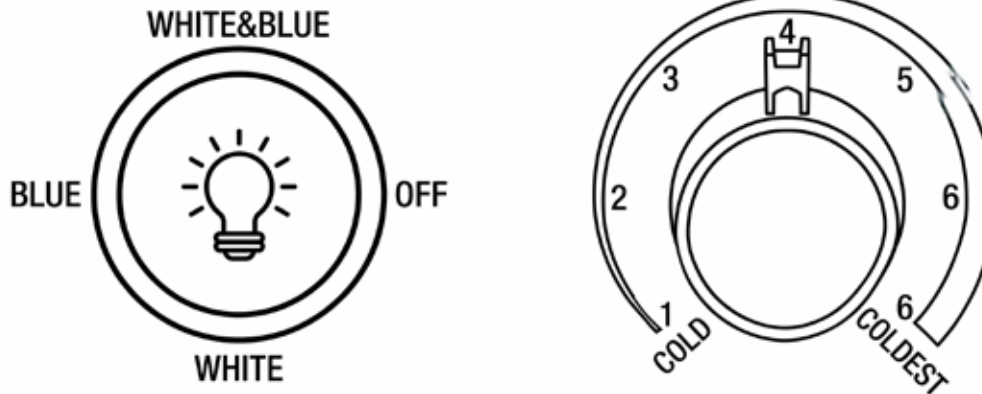

TEMPERATURE CONTROL

The temperature in the glass door freezer is controlled by the temperature control knob. The temperature control knob is located at the back side of the glass door freezer. To operate this control, turn the temperature control knob up or down to regulate the temperature inside the glass door freezer. The "1 - 6" number markings on the control knob indicate the different temperature settings. Position "1" being least cold and position "6" being the coldest.

NOTE: The temperature will not go above freezing even when the unit is set to the "1" setting.

INTERIOR LIGHT

To turn ON/OFF the interior light, press the light button next to the thermostat control knob.

NOTE: This freezer displays 3 different interior light colors: White, Blue, and White & Blue. Each time you press the light button, the light will change between these colors.

STORING & FREEZING FRESH FOOD

For safe and proper food storage, allow the freezer to cool for approximately 4 hours before placing food inside. The unit will run continuously during this initial cooling period. Do not place unfrozen food inside until the freezer has reached operating temperature. When adjusting temperature settings, allow several hours for the interior to stabilize before adding or rearranging food.

For best results when freezing fresh food:

- Freeze only 3 pounds of fresh food per cubic foot of freezer space at one time
- Package food in meal-sized portions using plastic bags, aluminum foil, or freezer-safe containers
- Ensure food is stored under sanitary conditions, as freezing does not sterilize food
- Never place hot or warm food directly into the freezer

For storing previously frozen food:

- Follow all storage instructions printed on food packaging
- Keep adequate space between packages to maintain airflow
- Fresh and frozen foods should be kept separate to prevent temperature fluctuation

Do not store glass-bottled beverages such as beer or soda, as glass may break and cans may burst under freezing temperatures. This unit is designed as a freezer only and should not be used as a freezer.

DEFROSTING AND DRAINING

To avoid damaging the inside cabinet wall, never use a sharp or metallic instrument to scrape off frost or separate the frozen contents. Moisture contained in food and air may form a layer of frost inside the unit after a period of use. We highly recommend that the unit gets defrosted when frost becomes ¼" thick. The defrosting process for this unit is operated manually.

FOR COMPLETE DEFROSTING:

1. Unplug the unit from its power source.
2. Remove all contents and place them in corrugated boxes, insulated bags, a picnic cooler, etc. Use towels and newspaper for insulation as needed.
3. With the door open, use pans of hot water to speed the loosening of the frost. Remove large pieces before they melt.
4. Remove the clear drain plug from the inside base cabinet of the freezer. Water drained from the base of the freezer will be expelled out through the drain tube located at the back side of the freezer. Ensure that a container is placed under the drain tube before removing the drain plug located within the inside base cabinet.
5. Sponge excess water from the bottom of the freezer.
6. After defrosting, clean the inside and dry with a soft cloth to wipe away the remaining ice and water.

Once the compartment is wiped and dry, replace the drain plug and plug in the freezer. Return the temperature value to its previous setting and return food to the freezer.

NOTE: Do not use mechanical devices or other means to accelerate the defrosting process. DO NOT pour hot water directly into the cabinet or heat with a hair dryer while defrosting.

NORMAL OPERATION SOUNDS

Your glass door freezer may make sounds that are not familiar to you. Hard surfaces like some flooring and walls can make the sounds seem louder than they actually are. The following describes the kinds of sounds that may be new to you and the cause of those sounds.

- Rattling noises may come from the flow of the refrigerant or the water line; items stored on top of the freezer can also make noises.
- The high-efficiency compressor may make a pulsating or high-pitched sound.
- Noise emitted by the cooling fan on the condenser is a normal function.
- It is normal for the fan in the power supply to run all the time.
- As each cycle ends, you may hear a gurgling sound due to the refrigerant flowing in your glass door freezer.

CLEANING

OUTSIDE/EXTERIOR

- Wipe with a clean cloth lightly dampened with appliance polish wax or mild liquid dishwashing detergent. Dry and polish with a clean, soft cloth.
- Do not wipe the glass door freezer with a soiled dishwashing cloth or wet towel. Do not use scouring pads, powdered cleaners, bleach, or cleaners containing bleach.

INSIDE

- Use a warm water and baking soda solution — about a tablespoon of baking soda to a quart of water. Rinse thoroughly with water and wipe dry.
- Do not use cleaning powders or other abrasive cleaners. An open box of baking soda in the glass door freezer will absorb stale freezer odors. Change the box every three months.

PROLONGED OFF PERIODS

IF THE GLASS DOOR FREEZER IS NOT TO BE USED FOR A LONG PERIOD OF TIME, DISCONNECT THE GLASS DOOR FREEZER FROM THE MAIN POWER SUPPLY. CLEAN AND DRY THE INSIDE AS INSTRUCTED. LEAVE THE FREEZER DOOR OPEN TO PREVENT ANY MOLD AND MILDEW GROWTH.

USAGE TIPS:

- KEEP THE FREEZER DOOR CLOSED AS MUCH AS POSSIBLE. TRY NOT TO OPEN THE DOOR TOO FREQUENTLY, ESPECIALLY WHEN WEATHER IS HOT AND HUMID.
- ENSURE THAT THE UNIT HAS SUFFICIENT CLEARANCE FOR VENTILATION.
- FOR NORMAL HOUSEHOLD USE, IT IS RECOMMENDED TO SET THE TEMPERATURE TO THE MIDDLE SETTING.
- BEFORE LOADING THE GLASS DOOR FREEZER WITH AN ITEM, MAKE SURE IT IS COOLED TO AMBIENT TEMPERATURE.
- ICE AND FROST LAYERS INCREASE ENERGY CONSUMPTION; DEFROST WHEN FROST IS 3-5 MM THICK.

PREPARING FOR VACATION

To maintain the glass door freezer in operation during vacations, be sure your house power is not turned off. For extended vacations or absences, you may prefer to move your frozen foods to a storage locker temporarily. If your glass door freezer is to be left empty, disconnect the power cord plug from the power source. To prevent the formation of odors, place an open box of baking soda in the glass door freezer and leave the glass door freezer door open.

POWER INTERRUPTIONS

If the electricity goes off for a short period, keep the door closed to help food stay cold and frozen. If the power will be out for a longer period of time, remove food from the appliance and store it in a frozen food locker.

NOTE: If the appliance is unplugged, encounters a power interruption, or is turned off, you must wait 3-5 minutes before restarting the appliance. If restarted before this time delay, the appliance may not start.

- Keep the freezer door closed. Your freezer will keep food frozen for 24 hours provided warm air is not admitted.
- If the freezer is out of operation for 24 hours or more, add dry ice. Leave ice in large pieces. Add more ice as required.
- If dry ice is not available, move food to a frozen locker temporarily until power is restored.

NOTE: Handling dry ice can cause freezing of the hands gloves or other protection is recommended.

ENERGY SAVING TIPS

The glass door freezer should be located in the coolest area of the room, away from heat-producing appliances or heating ducts, and out of direct sunlight. Let hot foods cool to room temperature before placing them in the glass door freezer. Overloading the glass door freezer forces the compressor to run longer. Foods that freeze too slowly may lose quality or spoil. Be sure to wrap foods properly, and wipe containers dry before placing them in the glass door freezer. This cuts down on frost buildup inside the glass door freezer.

Freezer shelves should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the glass door freezer less efficient. Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.



Troubleshooting

Many common Glass Door Freezer problems are easily resolved. Try the troubleshooting suggestions below

Problem	Possible Causes	Solutions
The machine won't operate	<ul style="list-style-type: none"> The glass door freezer is unplugged The voltage is not in the correct range Too many appliances running from the same circuit 	<ul style="list-style-type: none"> Push the plug completely into the power source Make sure that the glass door freezer runs on a dedicated power source that can support the maximum power consumption of the glass door freezer Run the glass door freezer on a dedicated power circuit
Noise during operation	<ul style="list-style-type: none"> The legs are not leveled Certain sounds are normal 	<ul style="list-style-type: none"> Make sure legs are properly installed See "Normal Operation Sounds" section
The compressor runs for 1 to 5 minutes and stops	<ul style="list-style-type: none"> The voltage is not in the correct range 	<ul style="list-style-type: none"> Unplug and restart when the power is normal
The compressor runs but the inner liner does not get very cold	<ul style="list-style-type: none"> The ambient temperature is too high The system is blocked 	<ul style="list-style-type: none"> If temperature is higher than 90°F, the unit needs longer to cool to the set temperature Contact Whynter Service Department via email at support@whynter.com
The glass door freezer does not cool sufficiently	<ul style="list-style-type: none"> Freezer door being opened frequently Freezer door left open for a while Not enough adequate clearance Freezer is overfilled Ambient temperature is too high 	<ul style="list-style-type: none"> Refrain from opening the glass door freezer door recurrently Make sure to close freezer door Follow recommended clearance measurements If temperature is higher than 90°F, the unit needs longer to cool to the set temperature
The compressor does not run	<ul style="list-style-type: none"> The controller is faulty (the power indicator is not on) The temperature is set too high and the ambient temperature is too low 	<ul style="list-style-type: none"> Contact Whynter Service Department via email at support@whynter.com Set the glass door freezer to a lower temperature
Door does not fully close	<ul style="list-style-type: none"> Legs are not properly leveled Stored items holding door open 	<ul style="list-style-type: none"> See "Leveling the Glass Door Freezer" Move stored item to a different location
Food defrosting	<ul style="list-style-type: none"> Freezer is unplugged Fuse blown Freezer door being opened frequently Freezer door left open for a while 	<ul style="list-style-type: none"> Push the plug completely into the power source Replace fuse or reset the breaker Check to see if an object is holding the door open
Excessive frost buildup	<ul style="list-style-type: none"> Door left open too frequent or too long door openings High humidity 	<ul style="list-style-type: none"> Check to see if an object is holding the door open Open the door less often
Freezer external surface is warm	<ul style="list-style-type: none"> The external glass door freezer walls can be as much as 30°F warmer than room temperature 	<ul style="list-style-type: none"> This is normal while the compressor works to transfer heat from inside the glass door freezer cabinet
Moisture forms on inside glass door freezer walls	<ul style="list-style-type: none"> Weather is hot and humid, which increases internal rate of frost buildup Door may not be seating properly Door is kept open too long, or is opened too frequently 	<ul style="list-style-type: none"> This is normal Check door installation Open the door less often
Odors in glass door freezer	<ul style="list-style-type: none"> Interior needs to be cleaned Food with strong odors are in the glass door freezer 	<ul style="list-style-type: none"> Clean interior with sponge, warm water, and baking soda



Live Support

Still having issues? Get real-time help through our live chat.





ONE YEAR LIMITED WARRANTY

Warranty begins from the original date of purchase

This WHYNTER product is warranted, to the original owner within the 48 continental states, for one year from the date of purchase against defects in material and workmanship under normal use and service. When making a warranty claim, please have the original bill or invoice of purchase with purchase date available. Should your WHYNTER product prove defective within one year from the date of purchase, return the defective part or unit, freight prepaid (within two months of purchase; after two months to one year, customer will be responsible for freight cost to Whynter's service department), along with an explanation of the claim to Whynter LLC. A return authorization number issued by Whynter is required for all warranty claims and returns. Please package the WHYNTER product carefully in its original packaging material to avoid damage in transit. The original box and packaging material should be retained, as Whynter is not responsible for the cost of replacement packaging. Under this warranty, Whynter will repair or replace any parts found defective at our discretion. This warranty is not transferable. After the expiration of the warranty, the cost of labor and parts will be the responsibility of the original owner of the unit.

THIS WARRANTY DOES NOT COVER:

- Acts of God, such as fire, flood, hurricanes, earthquakes and tornadoes.
- Improper power supply such as power surge, low voltage, defective household wiring or inadequate fuses.
- Use in commercial or industrial applications.
- Damage, accidental or otherwise, to the product while in the possession of a consumer not caused by a defect in material or workmanship.
- Damage caused by consumer misuse, tampering, lack of maintenance or failure to follow the care and special handling provisions in the instructions.
- Damage to the finish of the case, or other appearance parts caused by wear.
- Damage caused by repairs or alterations to the product by anyone other than authorized by the manufacturer.
- Removal, Replacement Packaging, Freight and Insurance cost for the warranty service.
- Products sold AS IS or from an unauthorized reseller.
- Products that have had their serial numbers removed or defaced.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. WHYNTER SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. PRODUCT CONTENTS AND SPECIFICATIONS MAY CHANGE WITHOUT NOTICE.



**Need Help Fast?
Chat with Us!**

Get instant answers 24/7



Proof of Purchase
Please Retain Original
Proof of Purchase

To obtain service or information, contact Whynter LLC via email at support@whynter.com or call 866-WHYNTER.

© 2026 Whynter LLC | WWW.WHYNTER.COM



Need Help Fast?
Chat with Us!
Get instant answers 24/7



**JOIN THE
CONVERSATION**



E: support@whynter.com | T: 866-WHYNTER | www.whynter.com | ©2026 Whynter LLC

Disclaimer: All information and technical data provided in this manual are approximate values and estimations. Whynter reserves the right to modify product specifications or documentation without prior notice to improve performance and safety.